TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE

REPAIR PARTS AND

SPECIAL TOOLS LIST

FOR

METEOROLOGICAL DATA

PROCESSING GROUPS

OL-192/GMD-1

(NSN 6660-01-065-4467),

OL-192A/GMD-1

(NSN 6660-01-065-4466),

AND

OL-274/TNS-10

(NSN 1290-01-119-7313)

HEADQUARTERS, DEPARTMENT OF THE ARMY
17 MAY 1982

ORGANIZATIONAL MAINTENANCE REPAIR PARTS

OL-274/TNS-10

(NSN 1290-01-119-7313)

HEADQUARTERS, DEPARTMENT OF THE ARMY
17 MAY 1982

TECHNICAL MANUAL
NO. 11-6660-263-20P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, *17 May 1982*

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST FOR METEROLOGICAL DATA PROCESSING GROUPS OL-192/GMD-1 (NSN 6660-01-065-4467), OL-192A/GMD-1 (NSN 6660-01-065-4466), AND OL-274-TNS-10 (NSN 1290-01-119-7313)

Current as of 18 January 1982

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA form 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronics Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case, a reply will be furnished direct to you.

Table of Contents

			Page	Illus Figure
Section	I.	Introduction	1	
	II.	Repair Parts List	5	
Group	00	OL-192: Meterological Data Processing Group OL-192/GMD-1 and OL-192A/GMD-1 and OL-274: Sound Ranging Data Processing Group OL-274/TNS-10	5	1
	01	OL-192: Calculator, Programmable CP-1387/U (HP 9825A) and OL-274: Calculator, Programmable CP-1387A/U (HP 9825B)	9	2
		0101 OL-192: Memory Assembly and OL-274: Memory Assembly (No parts authorized).		
		010101 OL-192: 16K Byte Read Write Memory Circuit Card (HP 09825-66523) and OL-274: 24K/32K Byte Read/Write Memory Circuit Card Assembly (HP 09825-66524) (No parts authorized)		
		010102 OL-192: 8K Byte Read/Write Memory Circuit Card (HP09825-66522) and OL-274: 32 Byte Read Memory Circuit Card (HP09825-66525) (No parts authorized)		
		0102 OL-192: Processor Circuit Board (HP 09825-66523) and OL-274: Processor Board (HP09825-66517) (No parts authorized)		

* This manual supersedes TM 11-6660-263-20P, 14 May 1981.

			Page	Illus Figure
Group		0103 OL-192: Tape Transport Logic Circuit Board (HP09825-66561) and OL-274: Tape Transport Logic Circuit Board (HP09825-66561) (No parts authorized)		
		0104 OL-192: Base Assembly, Calculator (HP09823-67901) and OL-274: Base Assembly, Calculator (HP09825-64434) (No parts authorized)		
		010401 OL-192: Circuit Card ROM Interface (HP09825-66512) and OL-274: ROM Interface Circuit Card (HP09825-66512) (No parts authorized)		
		010402 OL-192: Power Supply Circuit Board (HP09825-66551) and OL-274: Power Supply Circuit Board (HP09825-66551) (No parts authorized)		
		010403 OL-192: Interface Circuit Card I/O (HP09825-66571) and OL-274: I/O Interface Circuit Card (HP09825-66571) (No parts authorized)		
		010404 OL-192: Power Module Assembly (HP 09825-67904) and OL-274: Power Module Assembly (HP 09825-67914)	11	3
		0105 OL-192: Bezel Assembly, Calculator (HP 09825-67902) and OL-274: Bezel Assembly, Calculator (HP 09825-64432)	13	4
		010501 OL-192: Tape Transport Assembly (HP 09815-67902) and OL-274: Tape Transport Assembly (HP 09815-67902) (No parts authorized)		
		010502 OL-192: Thermal Printer Assembly (HP 09825-67940) and OL-274: Thermal Printer Assembly (HP 09825-67940) (No parts authorized)		
		010503 OL-192: Display Board LED (HP09825-66541) and OL-274: LED Display Board (HP 09825-66541) (No parts authorized)		
		010504 OL-192: Keyboard, Calculator (HP 09825-68003) and OL-274: Keyboard, Calculator (HP 09825-67960 (No parts authorized)		
		01050401 OL-192: Keyswitch Assembly (HP09825-68001) and OL-274: Key-Switch Assembly (HP09825-68025) (No parts authorized)		
		0106 OL-192: Key Board, Display Printer KDP Assembly (HP09825-66533) and OL-274: Key Board, Display Printer KDP Assembly (HP09825-66533) (No parts authorized)		
		0107 OL-192: Mainframe ROM Language Assembly (HP09825-67905) (No parts authorized)		
		0108 OL-192: ROM, String Advanced Program Assembly (HP98210-67902) (No parts authorized)		
		0109 OL-192: RPM, General I/O, Extended I/O Assembly (HP98213-67902) (No parts authorized)		
		0110 OL-274: ROM, Matrix Assembly (HP98211-67902) (No parts authorized)		
	02	OL-192: Perforator/Reader RP-263/GMD-1	17	5
		0201 OL-192: Perforator Assembly (No parts authorized)		
		0202 OL-192: Front Panel Assembly (No parts authorized)		
		OL-192: Front Panel Assembly, Switch Plate Assembly	19	6
		0203 OL-192: Reader Panel Assembly (No parts authorized)		
		0204 OL-192: Chassis Assembly (No parts authorized)		
		020401 OL-192: Supply Deck (No parts authorized)		
		0205 OL-192: Perforator Logic Card Assembly (No parts authorized)		
		0206 OL-192: Perforator Driver Card Assembly (No parts authorized)		
		0207 OL-192: Reader Card Assembly (No parts authorized)		
		0208 OL-192: Power Supply Assembly	21	7
		OL-192: Power Supply Assembly, Transformer Assembly	23	8
		020801 OL-192: Printed Circuit Card Assembly, Power Supply	27	9
	03	OL-192: Cable Assembly, Special Purpose CX-13096/U (HP98032A) (No parts authorized)		
		0301 OL-192: Control Board Assembly (A1) (HP98032-66501) (No parts authorized)		
		0302 OL-192: Data Board Assembly (A3) (HP98032-66503) (No parts authorized)		
	04	OL-192: Case, Meterological Data Processing Group CY-7761/GMD-1 (No parts authorized)		
	05	OL-192: Case, Calculator, Programmable CY-7762/U (No parts authorized)		
		OL-274: Case, Programmable Calculator CY-7762/U (No parts authorized)		
	06	OL-192: Case, Reader-Perforator CY-7763/GMD-1 (No parts authorized)		
Section	III.	Special Tools List (No applicable)		
	IV.	National Stock Number and Part Number Index	28	

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the OL-192/GMD-1, OL-192A/GMD-1, and OL-274/TNS-10. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence. Bulk materials are listed in NSN sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	*Definition*
PA	Item procured and stocked for anticipated or known usage.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
XA	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	*Application/Explanation*
O	Support item is removed, replaced, used at the organizational level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	*Application/Explanation*
D	The lowest maintenance level capable of complete repair of the support item is the depot level.
Z	Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability codes	*Definition*
Z	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
D	Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
L	Reparable item. Repair, condemnation, and disposal not authorized below depot/ specialized repair activity level.
A	Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material). Refer to appropriate manuals/directives for specific instructions.

c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB 708-41/42 which is used to identify the manufacturer, distributor, or Government agency, etc.

e. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When a stock numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

f. Description. Indicates the Federal item name and, if required, a minimum description to identify the item.

g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h. Quantity Incorporated in Unit. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

4. Special Information

a. Usable on codes are shown in the description column. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are:

Code	*Used on*
DS5	OL-192/GMD-1
DS6	OL-192A/GMD-1
ET7	OL-274/TNS-10

b. The following publications pertain to the OL-192/GMD-1, OL-192A/GMD-1, and OL-274/TNS-10 and their components:

TM 11-1290-388-10, Sound Ranging Data Processing Group OL-274/TNS-10

TM 11-1290-388-24, Sound Ranging Data Processing Group OL-274/TNS-10

TM 11-6660-263-10, Meteorological Data Processing Groups OL-192/GMD-1 and OL-192A/GMD-1

TM 11-6660-263-24-1, Meteorological Data Processing Groups OL-192/GMD-1 and OL-192A/GMD-1

TM 11-6660-263-24-2, Meteorological Data Processing Groups OL-192/GMD-1 and OL-192A/GMD-1; Calculator, Programmable CP-1387/U (HP 9825A Desktop Computer)

TM 11-6660-263-24-3, Meteorological Data Processing Groups OL-192/GMD-1 and OL-192A/GMD-1; Reader-Perforator RP-263/GMD-1 (REMEX Model RAB612XBA)

TM 11-6660-263-24-4, Meteorological Data Processing Groups OL-192/GMD-1 and OL-192A/GMD-1; Cable Assembly, Special Purpose CX-13096/U (HP 98032A 16-Bit Interface)

c. The illustrations in this manual are identical to those published in TM 11-6660-263-34P. Only those parts assigned the third position SMR maintenance code "C" or "O" are listed in the tabular listing; therefore, there may be a break in the item number sequence. Only illustrations containing organizational authorized items appear in this manual.

d. National stock numbers (NSN's) that are missing from P source coded items have been applied for and will be added to this TM by future change/revision when they are entered in the Army Master Data File (AMDF). Until the NSN's are

established and published, submit exception requisitions to: Commander, US Army Communications-Electronics Command, ATTN: DRSEL—MM, Fort Monmouth, NJ 07703 for the part required to support your equipment.

5. How to Locate Repair Parts

a. When National stock number or part number is unknown.

(1) *First.* Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.

(2) *Second.* Find the illustration covering the functional group to which the item belongs.

(3) *Third.* Identify the item on the illustration and note the illustration figure and item number of the item.

(4) *Fourth.* Using the Repair Parts Listing, find the figure and item number noted on the illustration.

b. When National stock number or part number is known.

(1) *First.* Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item number.

(2) *Second.* After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations

Not applicable.

(Next printed page is 4)

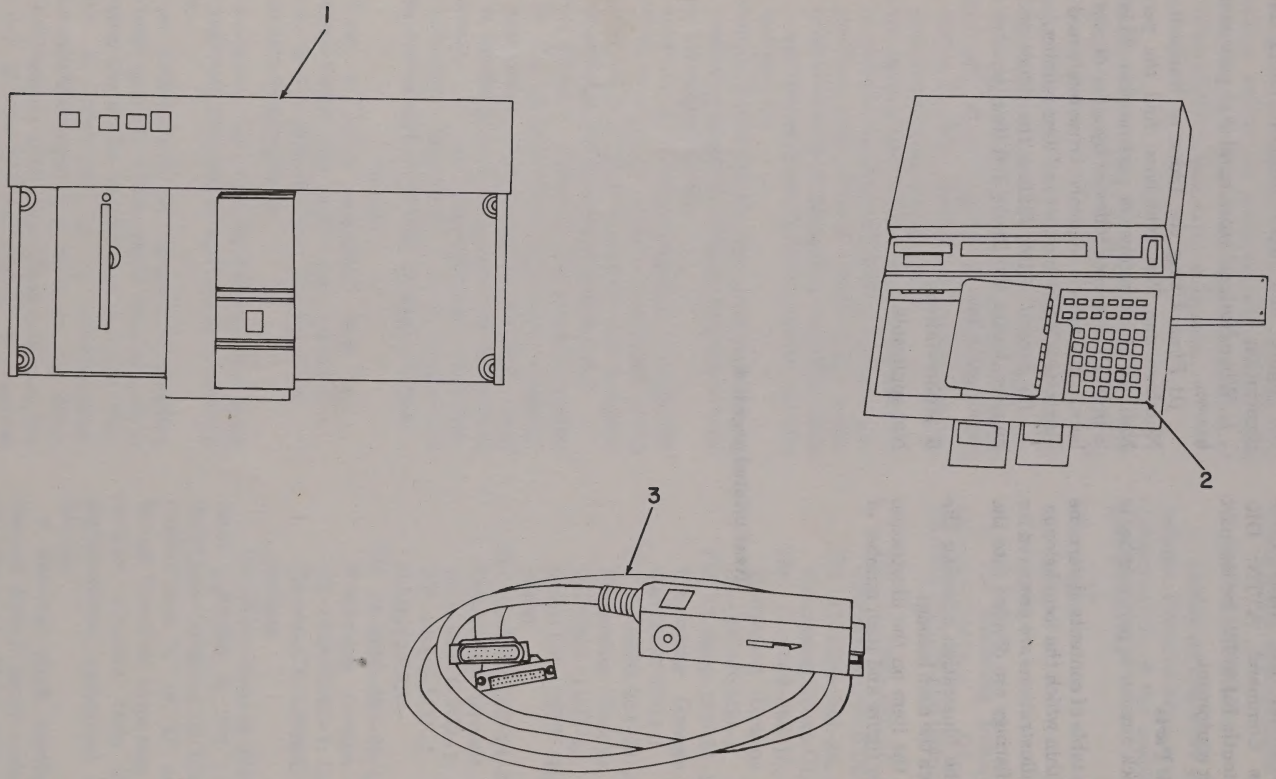

Figure 1. Meteorological Data Processing Groups OL-192/GMD-1, OL-192A/GMD-1 and OL-274/TNS-10.

(1) ILLUSTRATION (a) FIG NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION / USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						OL-192 GROUP 00 METEROLOGICAL DATA PROCESSING GROUP OL-192/GMD-1 AND OL-192A/GMD-1 AND OL-274 GROUP 00 SOUND RANGING DATA PROCESSING GROUP OL-274/TNS-10		
1	1	XDODD		80063	SC-D-937531	READER/PERF ASSY.....DS5,DS6	EA	1
1	2	XDODD	7420-01-026-1686	80058	CP-1387/U	CALCULATING MACHINE.....DS5,DS6	EA	1
1	2	PAODA		80058	CP-1387A/U	CALCULATOR,PROGRAM.....ET7	EA	1
1	4	PAODA	6660-01-074-6220	80058	CY-7762/U	CASE,CALCULATOR,PRO.....DS6,ET7	EA	1

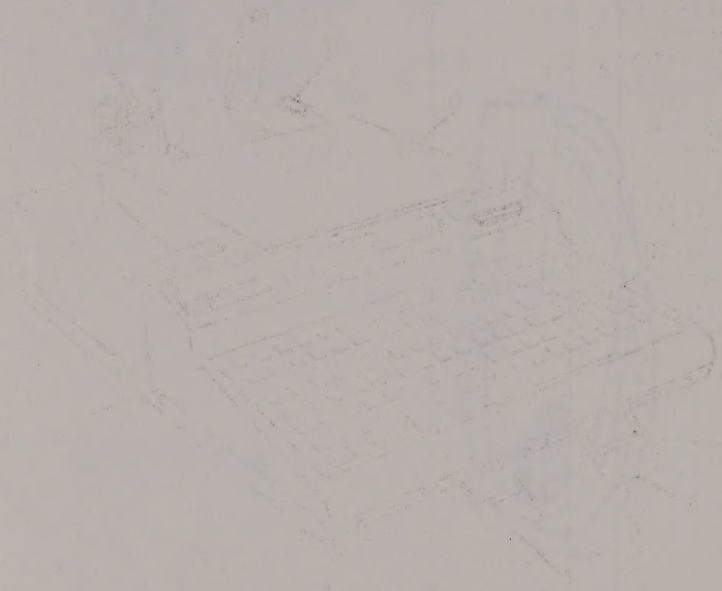

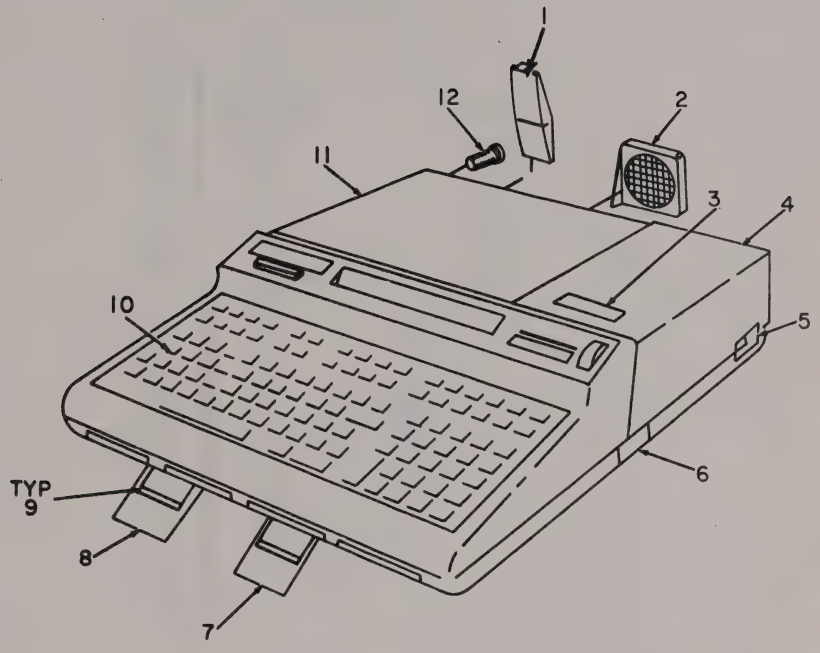

CALCULATOR

EL7BD003

Figure 2. Calculator, Programmable CP-1387/U (Sheet 1 of 2).

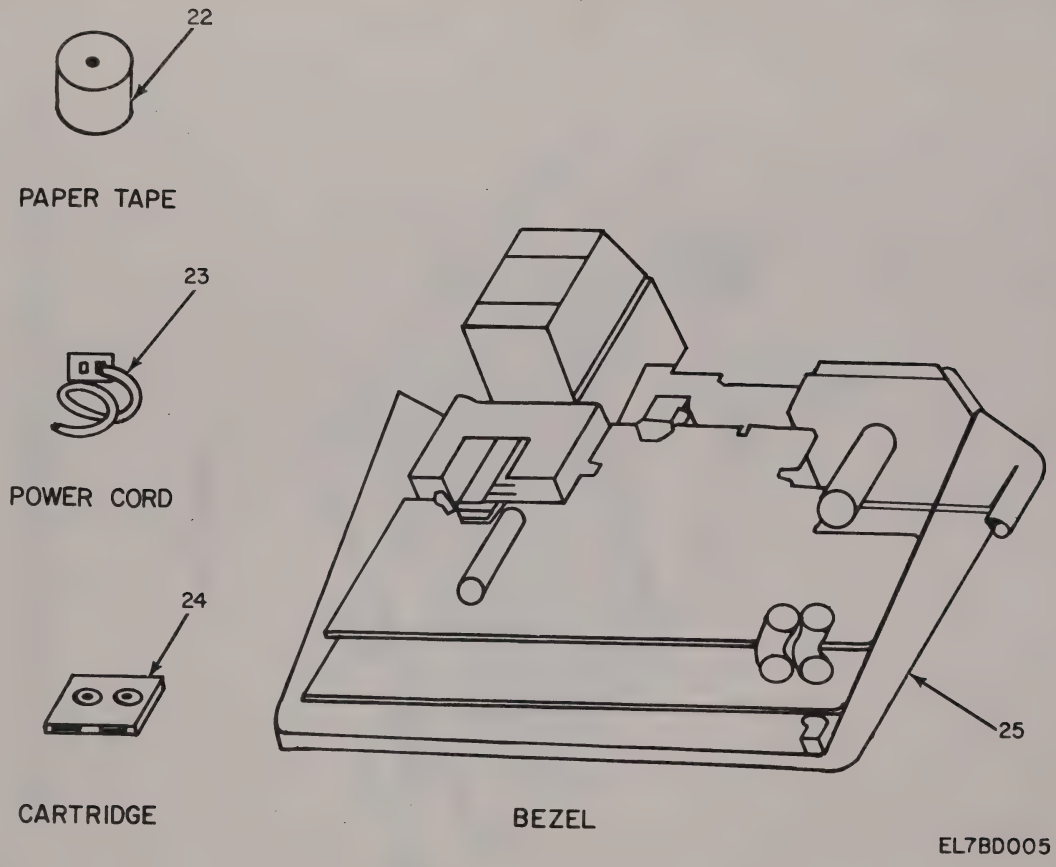

Figure 2. Calculator, Programmable CP-1387/U (Sheet 2 of 2).

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION / USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						DL-192 GROUP 01 CALCULATOR,PROGRAMMABLE		
						CP-1387/U (HP 9825A) AND		
						DL-274 GROUP 01 CALCULATOR,PROGRAMMABLE		
						CP-1387A/U (HP 9825B)		
2	2	PAOZZ	4130-01-081-3896	28480	4208-0110	FILTER MEDIA;AIR CO.....DS5,DS6	EA	1
2	9	PAOZA	6660-01-082-7989	80063	SC-C-937524-1	CARTRIDGE,DATA PROG.....DS5,DS6	EA	4
2	22	XDOZZ		28480	9270-048	PAPER,THERMAL PTR.....DS5,DS6	EA	3
2	23	PAOZZ	6150-00-008-5075	70903	KH7081	CABLE ASSEMBLY,POWE.....DS5,DS6	EA	1

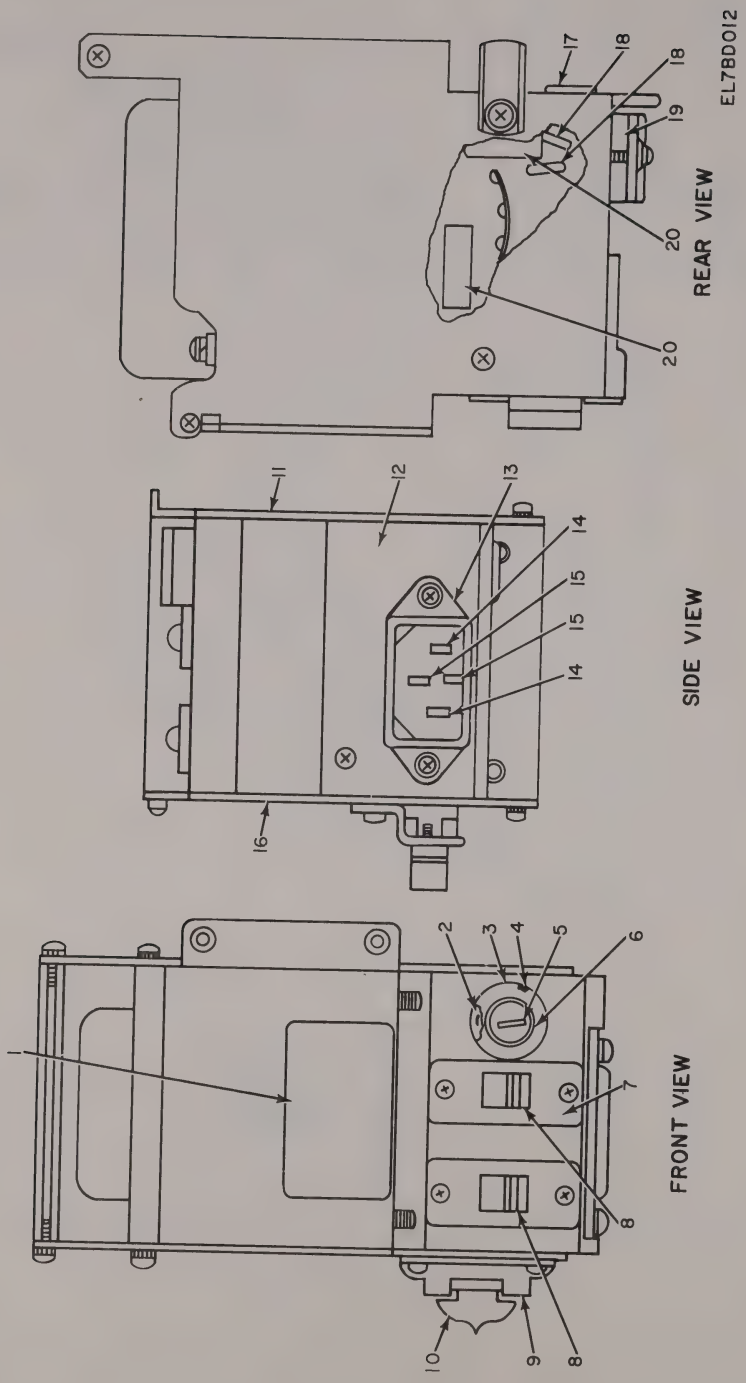

Figure 3. Housing Assembly, Transformer.

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION / USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						OL-192 GROUP 010404 POWER MODULE		
						(HP 09825-67904) AND		
						OL-274 GROUP 010404 POWER MODULE ASSEMBLY		
						(HP 09825-67914)		
3	3	XAOZZ		28480	2110-0545	CAP,ELECTRICAL.....	EA	1
3	5	XAOZZ		71400	AGC3	FUSE,CARTRIDGE.....	EA	1

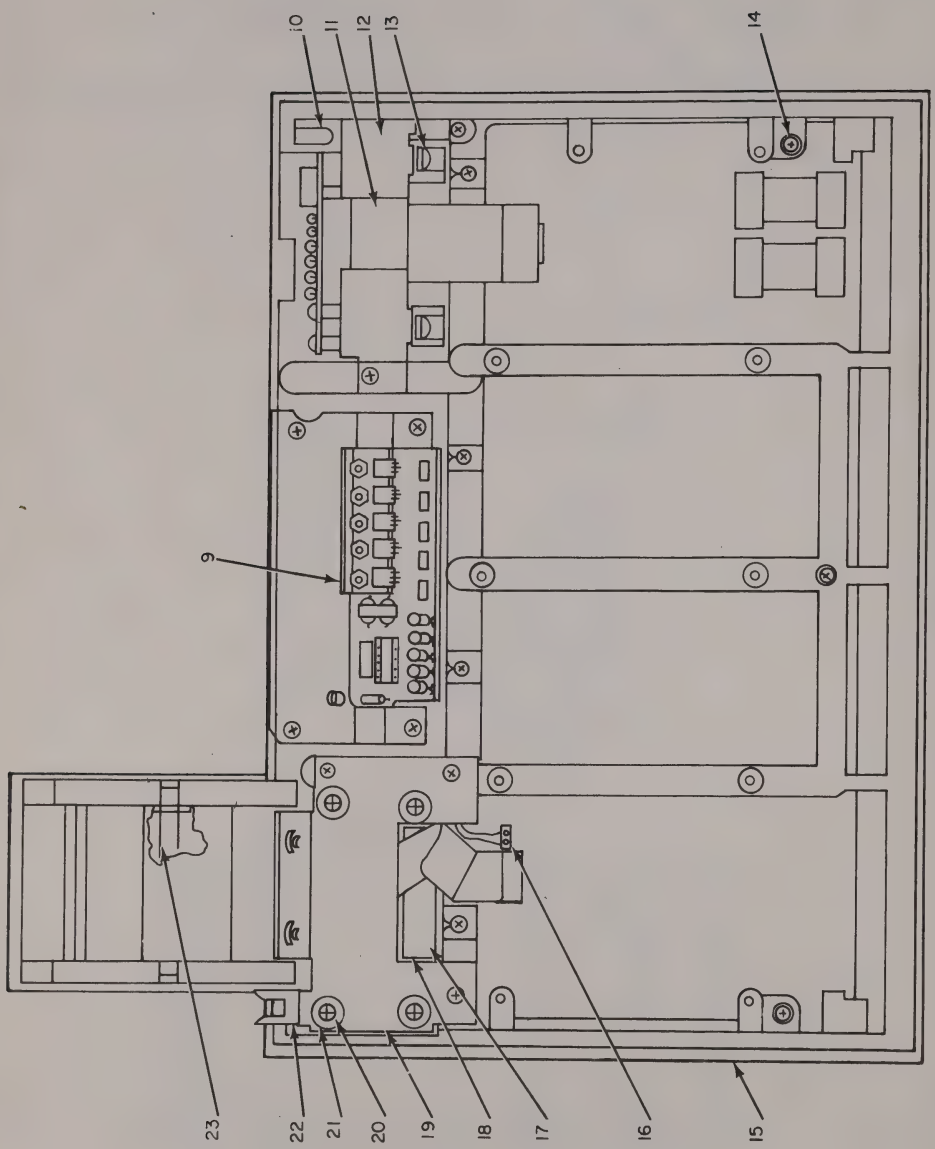

Figure 4. Bezel Assembly, Calculator.

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION / USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						OL-192 GROUP 0105 BEZEL ASSEMBLY, CALCULATOR (HP 09825-		
						OL-274 GROUP 0105 BEZEL ASSEMBLY CALCULATO (HP 09825-64432)		
						OL-192 GROUP 010504 KEYBOARD,CALCULATOR (HP 09825-68003) AND		
						OL-274 GROUP 010504 KEYBOARD,CALCULATOR (HP 09825-67960)		
4	23	XDOZZ	6660-01-094-1555	28480	09815-20602	SPINDLE,PAPER.....	EA	1

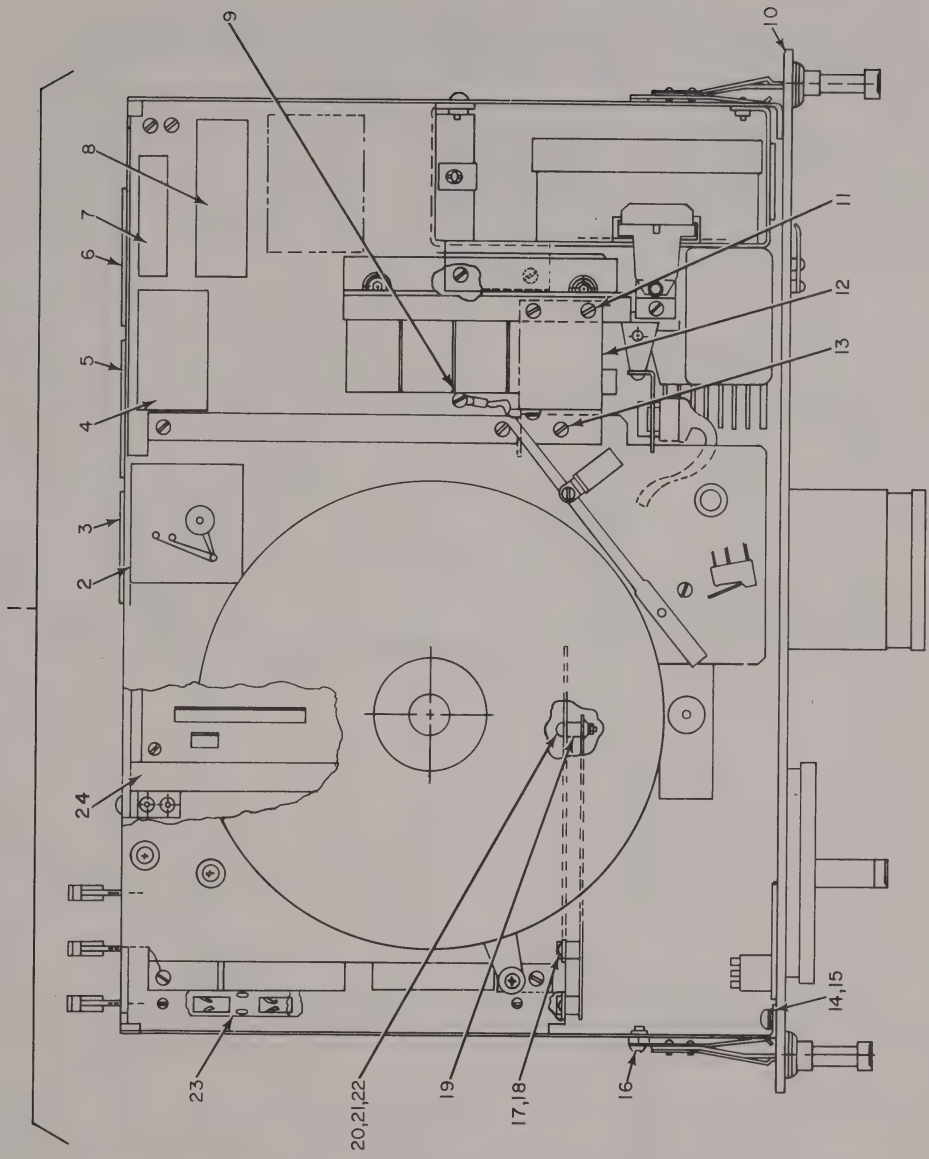

Figure 5. Perforator/Reader RP-263/GMD-1 (Sheet 1 of 2).

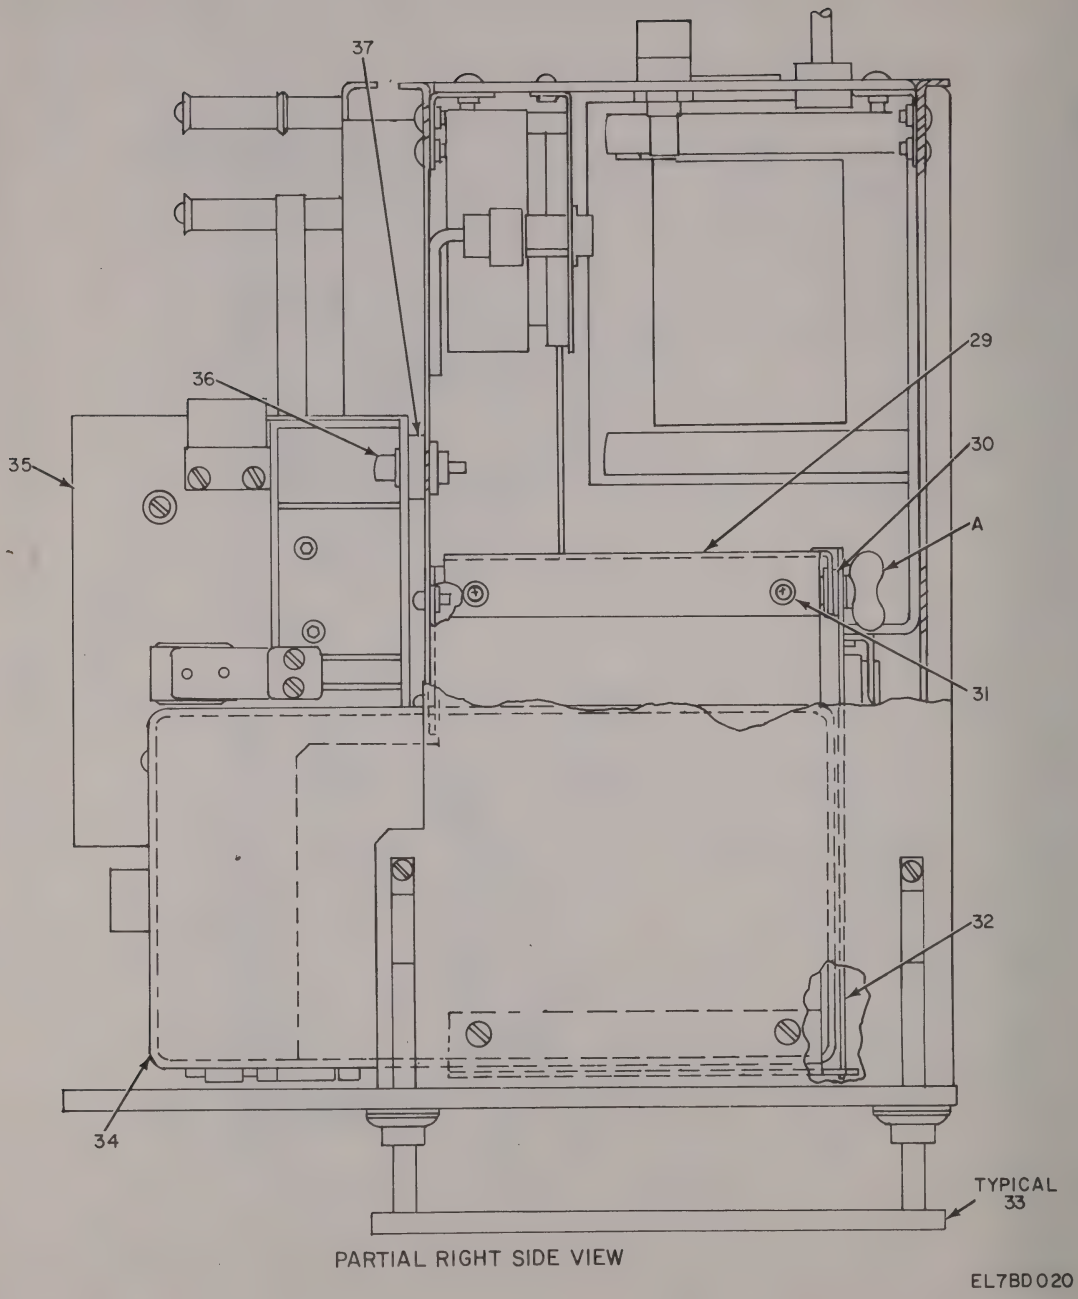

Figure 5. Perforator/Reader RP-263/GMD-1 (Sheet 2 of 2).

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION / USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						OL-192 GROUP 02 PERFORATOR/READER		
						RP-263/GMD-1		
5	1	PDODD	6660-01-068-8642	80058	RP-263/GMD-1	READER-PERFORATOR.....DS5,DS6	EA	1
5	2	XDOZZ		16550	109817-1	DECAL.....DS5,DS6	EA	1
5	3	XDOZZ		16550	113402-1	DECAL,CAUTION.....DS5,DS6	EA	1
5	4	XDOZZ		16550	110388-1	DECAL,PUNCH LUBE.....DS5,DS6	EA	1
5	5	XDOZZ		16550	110884-1	DECAL,WRN HAZARD.....DS5,DS6	EA	1
5	6	XDOZZ		16550	111933-4	DECAL,XFMR VOLTAGES.....DS5,DS6	EA	1
5	8	XDOZZ		16550	716018-113	LABEL,IDENT PLATE.....DS5,DS6	EA	1
5	33	XDOZZ		83014	H565A6875B	HANDLE.....DS5,DS6	EA	2
5	34	PADZZ	1560-00-932-9853	81996	113523-1	PALTE,ARMORED VALVE.....DS5,DS6	EA	1

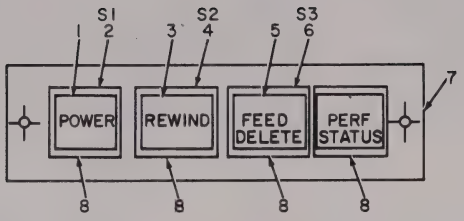

SWITCH PLATE

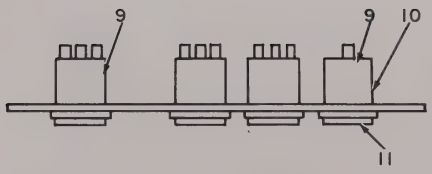

SIDE VIEW

EL7BD024

Figure 6. Front Panel Assembly, Switch Plate Assembly.

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						OL-192 FRONT PANEL ASSEMBLY,SWITCH PLATE ASSEMBLY		
6	1	PAOZZ	6210-01-094-1576	09353	B7952-04	LENS,LIGHT.....DS5,DS6	EA	1
6	3	XDOZZ		16550	715063-330	ROCKER,CAP.....DS5,DS6	EA	1
6	5	XDOZZ		16550	715063-320	ROCKER,CAP.....DS5,DS6	EA	1
6	9	PAOZZ	6515-00-885-6278	12073	362	CONNECTOR,ELASTIC T.....DS5,DS6	EA	2
6	11	XDOZZ		16550	715063-311	ROCKER,CAP.....DS5,DS6	EA	1

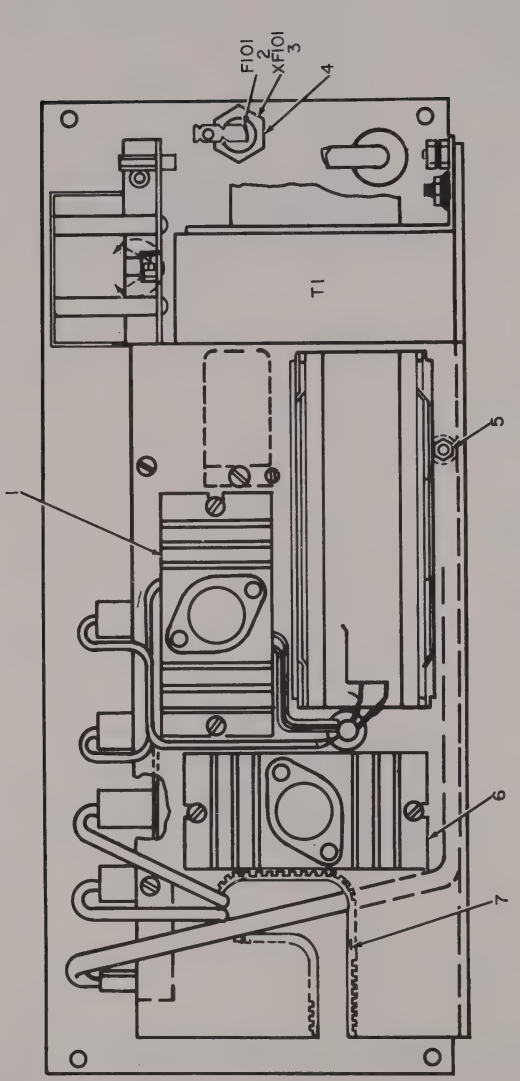

Figure 7. Power Supply Assembly.

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GL-192 GROUP 0208 POWER SUPPLY ASSEMBLY		
7	2	XDDZZ		71400	MDA2AMP	FUSE.....DS5,DS6	EA	1
7	4	PADZZ	5920-00-823-0624	71400	MDA4AMP	FUSE,CARTRIDGE.....DS5,DS6	EA	1

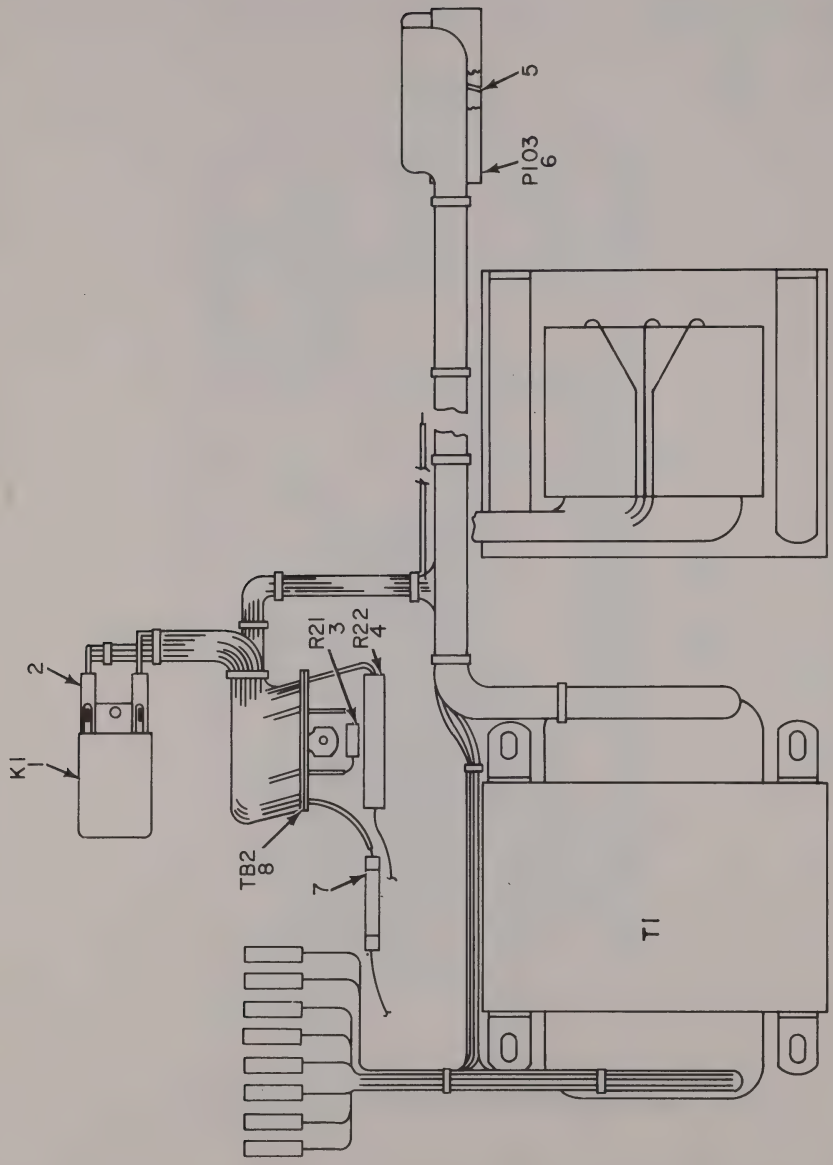

Figure 8. Power Supply Assembly, Transformer Assembly.

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION / USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						OL-192 POWER SUPPLY ASSEMBLY,TRANSFORMER ASSEMBLY		
8	7	XDDZZ		16550	705725-130	FUSE.....DS5,DS6	EA	1

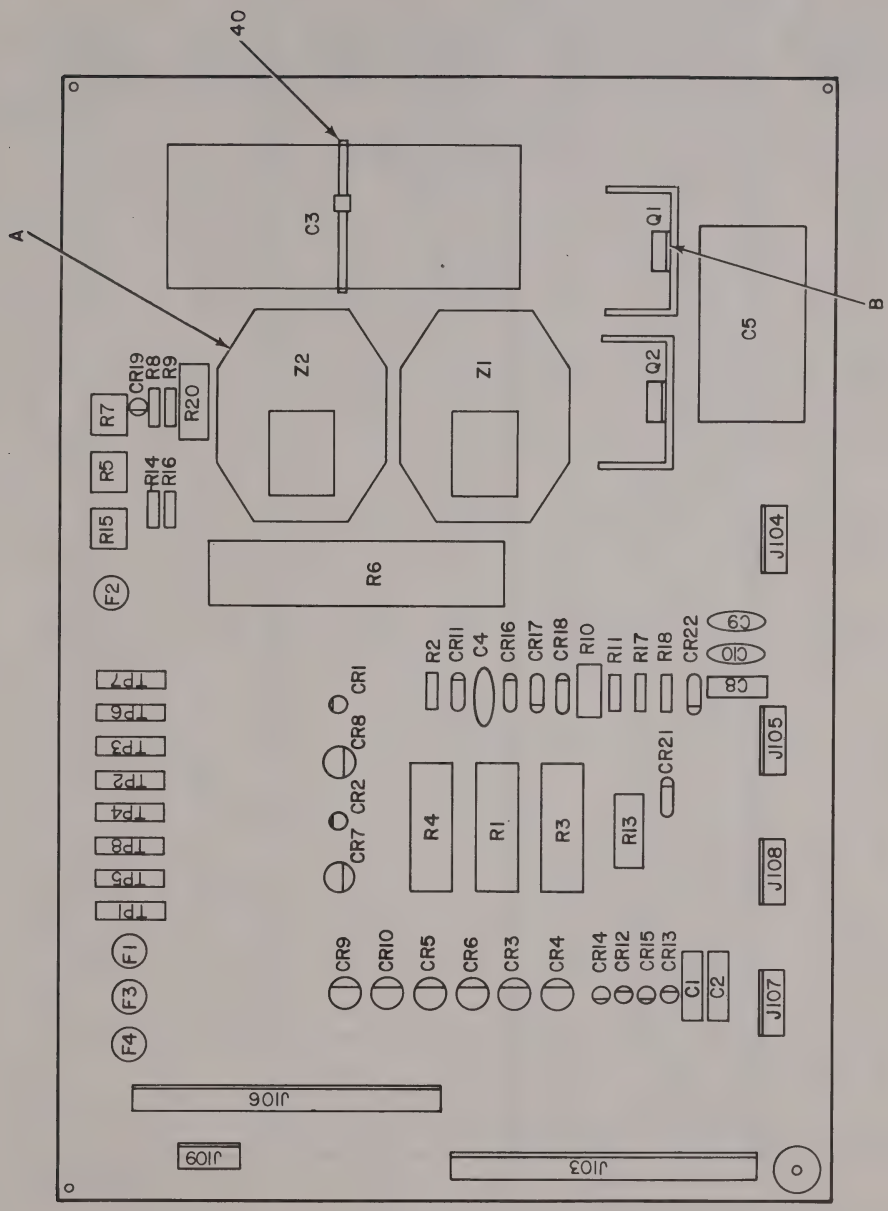

EL7BD054

Figure 9. Printed Circuit Card Assembly, Power Supply (Sheet 1 of 2).

REF. DES.	ITEM NO.	REF. DES.	ITEM NO.	REF. DES.	ITEM NO.	REF. DES.	ITEM NO.
C1	1	CR11	8	J106	17	R14	32
C2	1	CR12	6	J107	18	R15	33
C3	2	CR13	6	J108	19	R16	34
C4	3	CR14	6	J109	20	R17	35
C5	4	CR15	6	Q1	21	R18	35
C8	5	CR16	9	Q2	22	R20	36
C9	3	CR17	9	R1	23	TP1	37
C10	3	CR18	9	R2	24	TP2	38
CR1	6	CR19	6	R3	25	TP3	38
CR2	6	CR21	10	R4	23	TP4	38
CR3	7	CR22	9	R5	26	TP5	38
CR4	7	F1	11	R6	27	TP6	38
CR5	7	F2	12	R7	26	TP7	38
CR6	7	F3	13	R8	28	TP8	38
CR7	7	F4	12	R9	28	Z1	39
CR8	7	J103	14	R10	29	Z2	39
CR9	7	J104	15	R11	30		
CR10	7	J105	16	R13	31		

EL7BD056

Figure 9. Printed Circuit Card Assembly, Power Supply (Sheet 2 of 2).

(1) ILLUSTRATION (a) FIG NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) FSCM	(5) PART NUMBER	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GL-192 GROUP 020801 PRINTED CIRCUIT CARD ASSEMBLY,POWER SUPPLY		
9	11	PAOZZ	5920-00-480-4088	71400	GMW1-4	FUSE,CARTRIDGE.....DS5,DS6	EA	1
9	12	PAOZZ	5920-01-063-7799	71400	GMW4AMP	FUSE,SPECIAL.....DS5,DS6	EA	2
9	13	XDOZZ		71400	GMW2AMP	FUSE.....DS5,DS6	EA	1

STOCK NUMBER	FIGURE NO.	ITEM NO.
6150-00-008-5075	2	23
5920-00-480-4088	9	11
5920-00-823-0624	7	4
6515-00-885-6278	6	9
1560-00-932-9853	5	34
7420-01-026-1686	1	2
5920-01-063-7799	9	12
6660-01-068-8642	5	1
6660-01-074-6220	1	4
4130-01-081-3896	2	2
6660-01-082-7989	2	9
6660-01-094-1555	4	23
6210-01-094-1576	6	1
6660-01-119-3207	11	
6660-01-119-3208	10	

FSCM	PART NUMBER	FIGURE NO.	ITEM NO.
71400	AGC3	3	5
09353	B7952-04	6	1
80058	CP-1387/U	1	2
80058	CP-1387A/U	1	2
80058	CY-7762/U	1	4
71400	GMW1-4	9	11
71400	GMW2AMP	9	13
71400	GMW4AMP	9	12
83014	H565A6875B	5	33
70903	KH7081	2	23
71400	MDA2AMP	7	2
71400	MDA4AMP	7	4
80058	RP-263/GMD-1	5	1
80063	SC-C-937524-1	2	9
80063	SC-D-937531	1	1
28480	09815-20602	4	23
16550	109817-1	5	2
16550	110388-1	5	4
16550	110884-1	5	5
16550	111933-4	5	6
16550	113402-1	5	3
81996	113523-1	5	34
28480	2110-0545	3	3
12073	362	6	9
28480	4208-0110	2	2
16550	705725-130	8	7
16550	715063-311	6	11
16550	715063-320	6	5
16550	715063-330	6	3
16550	716018-113	5	8
28480	9270-048	2	22

U.S. GOVERNMENT PRINTING OFFICE: 1982—505-028/66

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

THEN. . JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)
Commander
Stateside Army Depot
ATTN: AMSTA-US
Stateside, N.J. 07703

DATE SENT
10 July 1975

PUBLICATION NUMBER	PUBLICATION DATE	PUBLICATION TITLE
TM 11-5840-340-20P	23 Jan 78	Radar Set AN/PRC-76

BE EXACT. . PIN-POINT WHERE IT IS

PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO
33			
44		19	
45			

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

For item 2, change the NSN to read: 5835-00-134-9186.
Reason: Accuracy.

Identify the cover on the junction box (item no. 5).
Reason: It is a separate item and is not called out on figure 19.

Add the cover of the junction box as an item in the listing for figure 19.
Reason: Same as above

SAMPLE

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER
SSG I. M. DeSpirit of 999-1776

SIGN HERE
I. M. DeSpirit

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE.

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

TEAR ALONG PERFORATED LINE

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL.

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER	PUBLICATION DATE	PUBLICATION TITLE
TM 11-6660-263-20P	17 May 82	Data Processing Groups OL-192/GMD-1, OL-192A/GMD-1 and OL-274/TNS-10

BE EXACT PIN-POINT WHERE IT IS			
PAGE NO.	PARA-GRAPH	FIGURE NO.	TABLE NO.

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER

SIGN HERE

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

TEAR ALONG PERFORATED LINE

TEAR ALONG PERFORATED LINE

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314

U.S. MAIL

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

Commander
US Army Communications-
Electronics Command
ATTN: DRSEL-ME-MQ
Fort Monmouth, New Jersey 07703

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

SOMETHING WRONG WITH THIS PUBLICATION?

THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL.

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER	PUBLICATION DATE	PUBLICATION TITLE
TM 11-6660-263-20P	17 May 82	Data Processing Groups OL-192/GMD-1, OL-192A/GMD-1 and OL-274/TNS-10

BE EXACT PIN-POINT WHERE IT IS

PAGE NO.	PARA-GRAPH	FIGURE NO.	TABLE NO.

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER

SIGN HERE

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

TEAR ALONG PERFORATED LINE

REVERSE OF DA FORM 2028-2

TEAR ALONG PERFORATED LINE

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314

U.S. MAIL

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

Commander
US Army Communications-
Electronics Command
ATTN: DRSEL-ME-MQ
Fort Monmouth, New Jersey 07703

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

SOMETHING WRONG WITH THIS PUBLICATION?

THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL.

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER	PUBLICATION DATE	PUBLICATION TITLE
TM 11-6660-263-20P	17 May 82	Data Processing Groups OL-192/GMD-1, OL-192A/GMD-1 and OL-274/TNS-10

BE EXACT PIN-POINT WHERE IT IS

PAGE NO.	PARA-GRAPH	FIGURE NO.	TABLE NO.

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER

SIGN HERE

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS ARE OBSOLETE

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

TEAR ALONG PERFORATED LINE

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314

U.S. MAIL

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

TEAR ALONG PERFORATED LINE

Commander
US Army Communications-
Electronics Command
ATTN: DRSEL-ME-MQ
Fort Monmouth, New Jersey 07703

By Order of the Secretary of the Army

E. C. MEYER
General, United States Army
Chief of Staff

Official:

ROBERT M. JOYCE
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-25C, Organizational Maintenance requirements for Meteorology.

U.S. GOVERNMENT PRINTING OFFICE: 1982—505-028/66

DEPARTMENT OF THE ARMY
US ARMY AG PUBLICATIONS CENTER
1655 WOODSON ROAD
ST. LOUIS, MISSOURI 63114

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE $300

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314